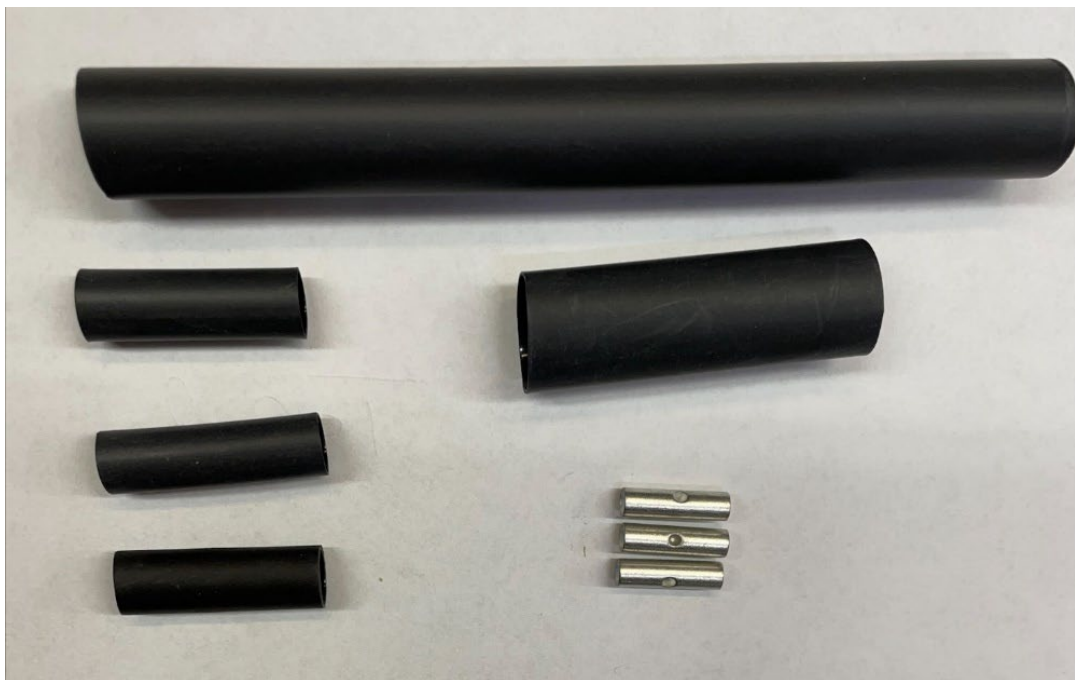


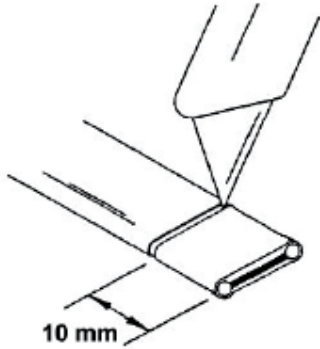
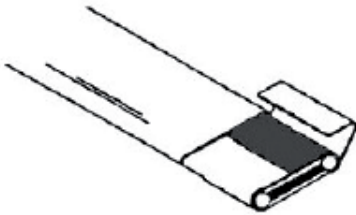


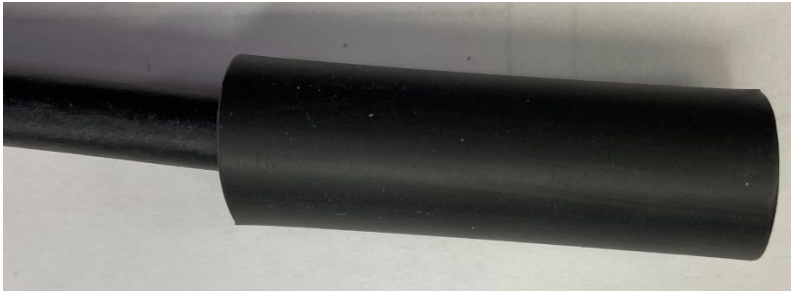
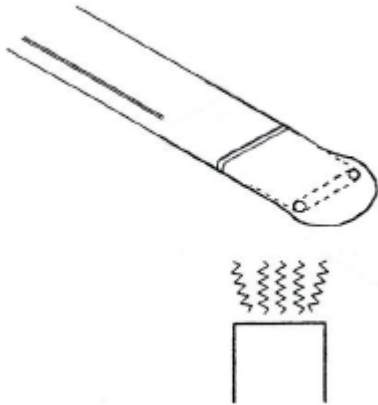
TERMINATION FOR SELF REGULATING HEATING CABLE ASSEMBLY GUIDE

DOC. 08092106
Januar 2025

Assembly guide	
Product	Self regulating heating cable - Bottom
Item no.	98600307

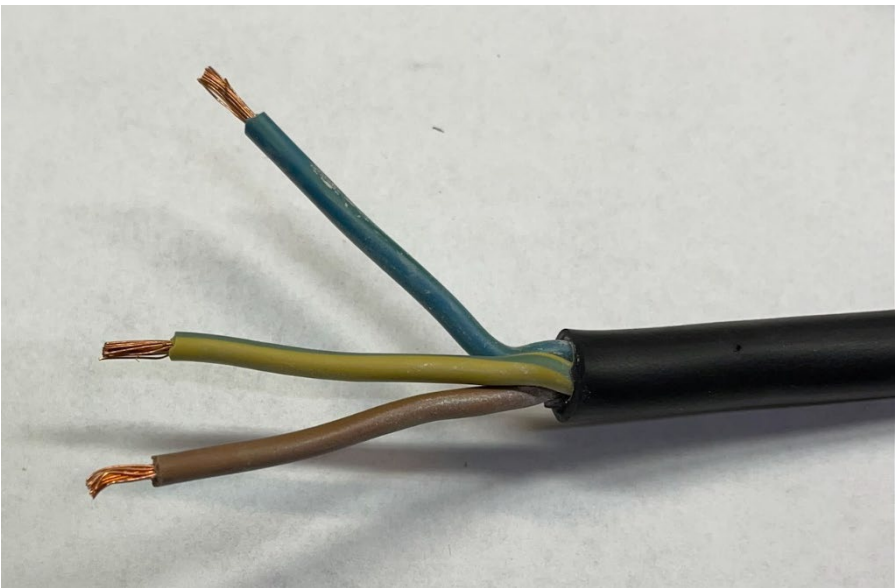
Procedure

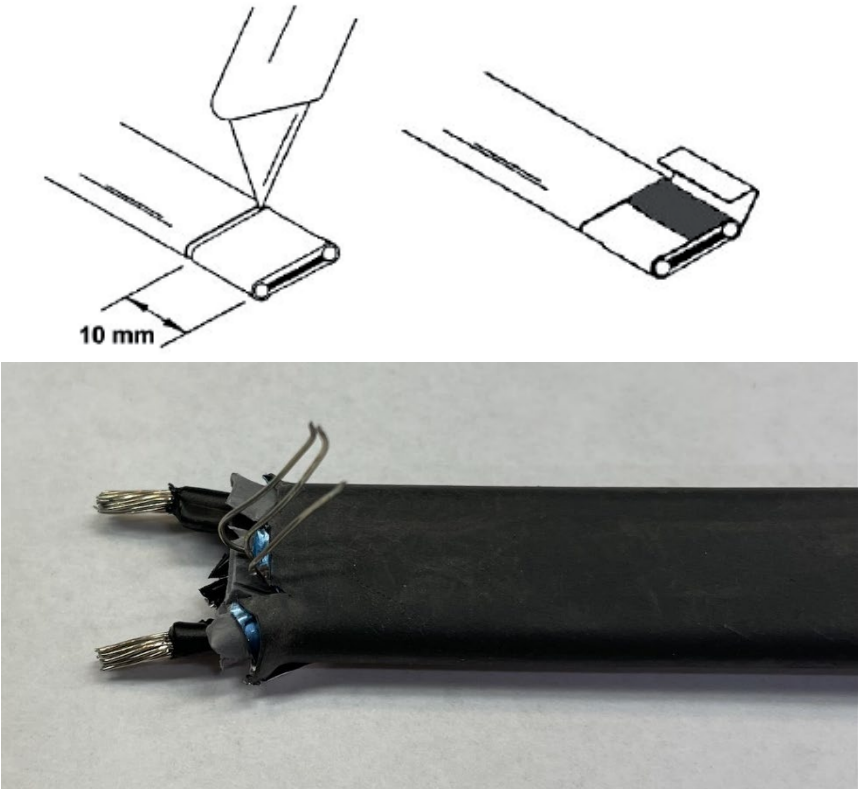
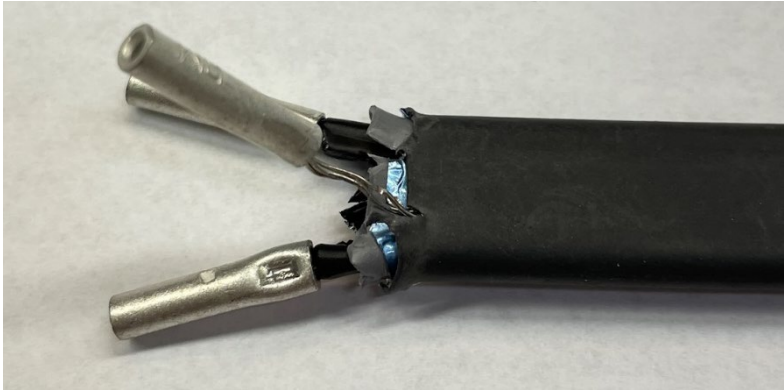
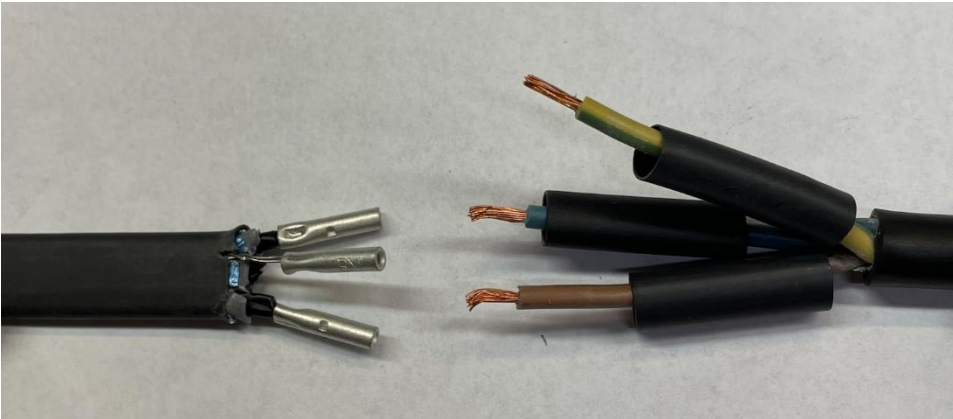
1.	Varen, selvregulerende kabel.	
2.	Afisoler 10 mm fra enden.	
3.	Fjern overskydende isolering.	

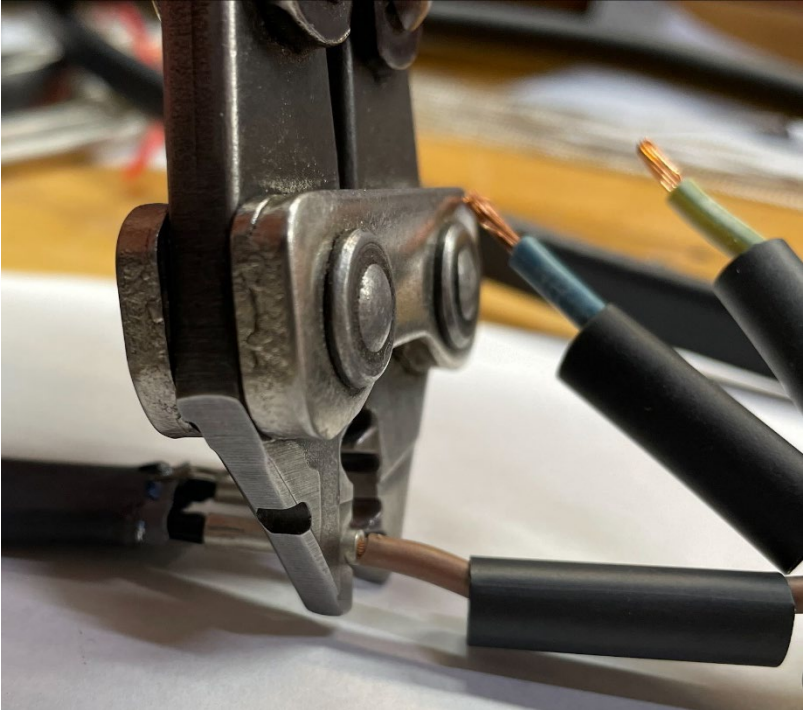
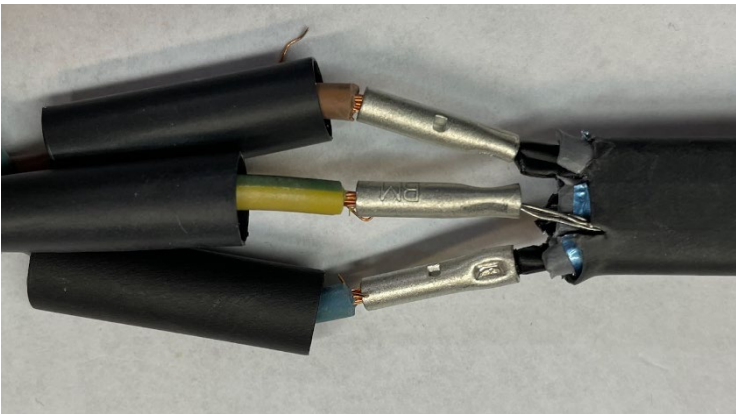
4.	Nu ser det selvregulerende kabel sådan ud. Træk krympeslange-stykket ned over enden.	
5.	Placer krympeslangestykket midt over det afisolerede stykke.	
6.	Varm krympeslangen, så den krymper sig sammen om enden af kablet. (Læs punkt 7 før opvarmning påbegyndes).	
7.	Klem krympeslangestykket i enden med en fladtang, mens den stadig er varm.	

Assembly guide	
Product	Self regulating heating cable - Top
Item no.	98600307

Procedure

8.	Varen, selvregulerende kabel.	
9.	Afisoler 55 mm kabel.	

10.	Afisoler selvregulerende kabel 10 mm fra enden, træk jordring fri og fjern den overskydende isolering.	 The diagram shows a hand using a utility knife to strip the outer jacket of a cable. A dimension line indicates a 10 mm strip. The photo shows the result: the outer jacket is removed, and the braided shield is being pulled away from the conductors.
11.	Sæt en nitte på hver ende ved brug af en klemmetang.	 The photo shows the stripped cable with two metal nuts being slid onto the conductors from opposite ends. A pair of wire cutters is used to crimp the nuts onto the wires.
12.	Sæt krympeslange (04003047) på de tre ledninger.	 The photo shows the three individual conductors with their nuts. Three pieces of black heat shrink tubing are being slid over each conductor. The photo also shows the final assembly where the tubing is crimped onto the conductors.

13.	De tre ender skal samles med nitterne. Sæt dem sammen og klem nitten med en klemmetang. Husk at jordledningen (den grøn/gule ledning) skal sættes sammen med jordledningen i det selvregulerende kabel. Ledningerne skal ligge parallelt overfor hinanden.	
14.	Nu er kablerne sat sammen.	
15.	Træk de tre små krympeslangestykker ned over nitterne.	

16.	Varm de tre krympeslange-stykker.	
17.	Træk nu det lange stykke krympeslange på 115 mm (04002936) ned over den samlede enhed. Placer krympeslangestykket på midten.	
18.	Krympeslangen er trukket ned over midten af samlingen.	
19.	Varm krympeslangen, så den lægger sig tæt til kablet.	